


RESET is the input. It connects to the junction of R7, R10, and Q2.  
SUMMING NODE is the output and connects to the summing node on the VCO.  
Make this wire as short as reasonably possible.  
Connect the GND pin to a ground on the Power/Regulation or VCO PCB.

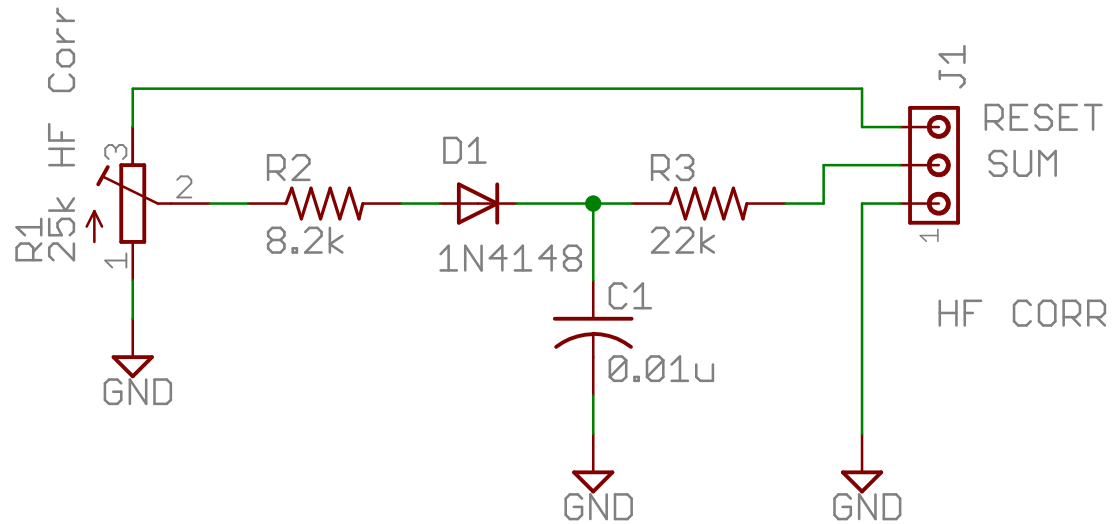

SP\_HF\_Corr\_1.0

TITLE:

Document Number:

REV:

Date: 2/14/2011 11:50:05 PM

Sheet: 1/1