


RST SUM GND

See schematic notes re: VC3 Scale and V/Oct trimmers

DO NOT INSTALL Q3 if a THAT340 is used.

■ shaped pad is CCW, GND, or Jack Sleeve
 For the exp. pair and PNP, use a THAT340,
 OR an SSM2210 or LS318 and a PNP (2N5138/PN5138),
 OR discrete, matched NPNs and a PNP
 Use the best fitting thermistor mounting holes.

PCB: © 2010 Analogue Realities, Rev. 1.6

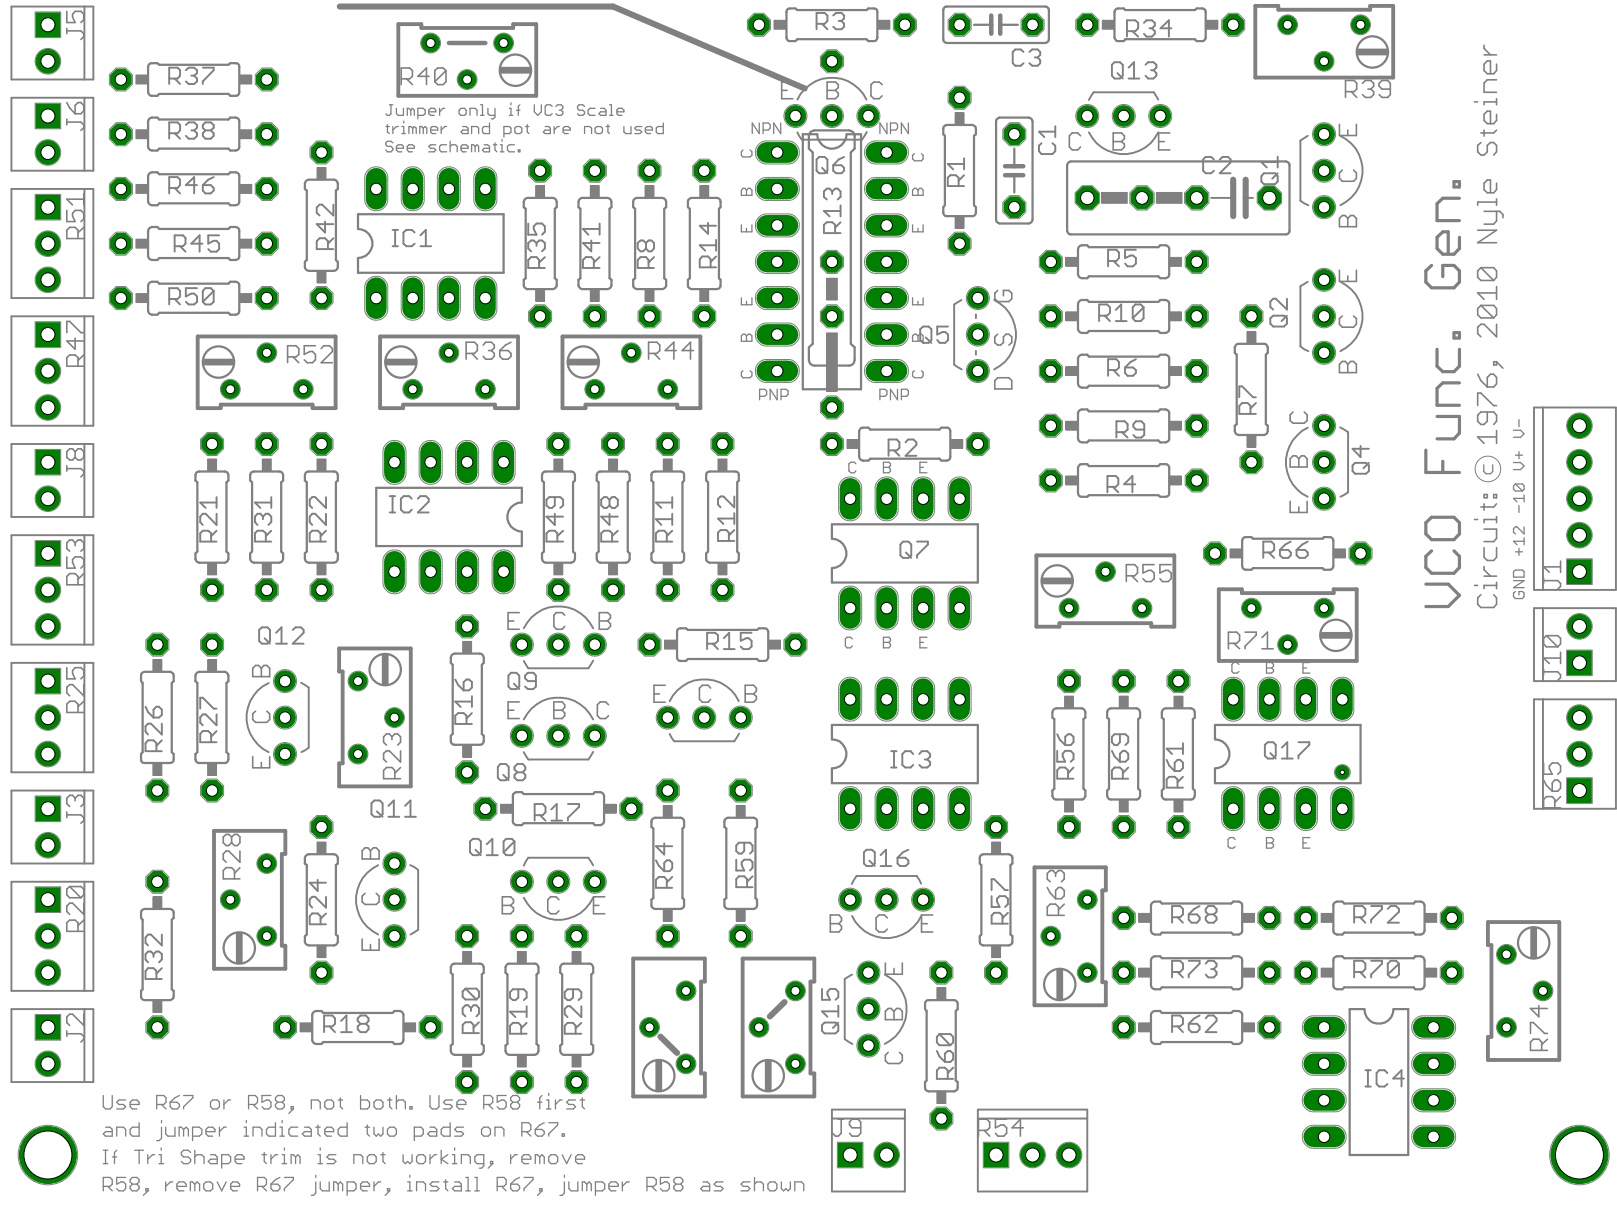

Jumper only if VC3 Scale trimmer and pot are not used See schematic.

Use R67 or R58, not both. Use R58 first and jumper indicated two pads on R67.
 If Tri Shape trim is not working, remove R58, remove R67 jumper, install R67, jumper R58 as shown

VCO Func. Gen.
 Circuit: © 1976, 2010 Nyle Steiner

GND +12 -10 U+ U-